

**LG-Power™**

**LC-M30UWFC**

**CURVED GAMING MONITOR**



**USER MANUAL**



# TABLE OF CONTENTS

- |                         |                                      |
|-------------------------|--------------------------------------|
| 1. Safety precautions   | 6. Rocker switch and indicator light |
| 2. Maintenance          | 7. Cable connection                  |
| 3. Product introduction | 8. OSD menu                          |
| 4. Installation         | 9. Basic parameters                  |
| 5. Adjustment           |                                      |
- 

## 1. Safety precautions

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
  - Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause injury or a damage to the device.
  - Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
  - Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
  - If the monitor will not be used for a long period, please unplug it from the electrical outlet.
  - Please use a reliable, properly earthed socket, do not overload the socket, or it may cause fire or electric shock.
  - Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
  - Do not disassemble or repair this product by yourself to avoid electric shock.
  - If faults occur, please contact the after-sales service directly.
  - Do not pull or twist the power cable forcedly.
- 

## 2. Maintenance

CAUTION: Unplug the power cable from the outlet before cleaning the monitor.

- To clean your screen, slightly moisten a soft, clean cloth with water.
- Please use a special screen-cleaning tissue if possible.
- Do not use benzene, thinner, ammonia, abrasive cleaners or compressed air.
- Inappropriate cleaning solutions may damage the monitor or leave a milky film on the screen or the housing.
- Unplug the monitor if you are not going to use it for a longer time period.
- Do not expose the monitor to dust, liquids or a humid environment.
- In case the monitor gets in touch with any liquid, wipe it down immediately using a dry cloth. In case any liquid gets spilled into the ventilation holes, do not use the monitor anymore. Please contact a professional service technician.

Legal note:

 


The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade Dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


# 3. Product introduction

Packing list: Display / base parts and screws / DP cable / power adapter / user manual

- Please check that the package of the monitor contains all parts. If any part is missing, please contact your retailer.
- Note: Additional screws may be used as spare parts.

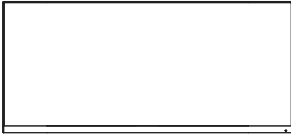


Monitor

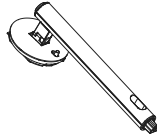 


Stand



 
Base




Mounting studs x4

 

DP signal cable

 

Power cable

 

Power adapter




User manual


# 4. Installation
 
## Installation of the base


1. Open the package to take out the protective styrofoam parts and put them on a flat tabletop.

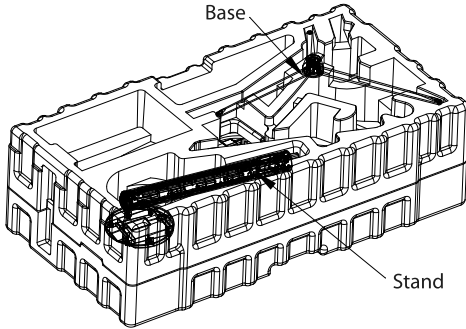

 2. Remove the stand and the base. Lock them with the thumb screw attached to the base, as shown in the figure below.

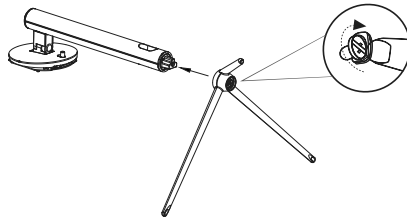


 3. Put the assembled base into the corresponding slot on the backside part of the housing, gently press the bracket down to lock it.

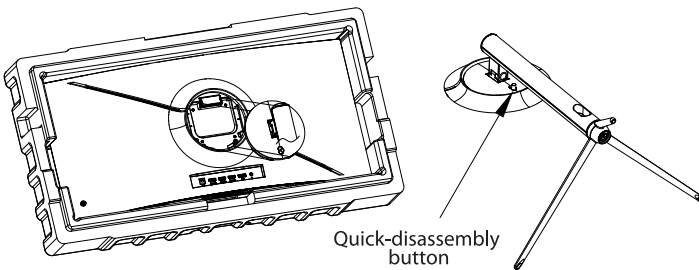

4. Place the monitor upright on the assembled base.

 
Note: Do not squeeze the screen directly with your hands during the process of installation or placing the monitor upright to prevent the panel from breaking.

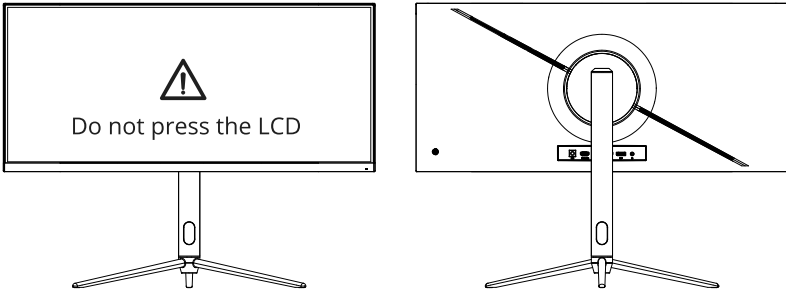


---

## Wall mounting assembly


 
1. Open the package to take out the styrofoam parts and put them on a flat tabletop.

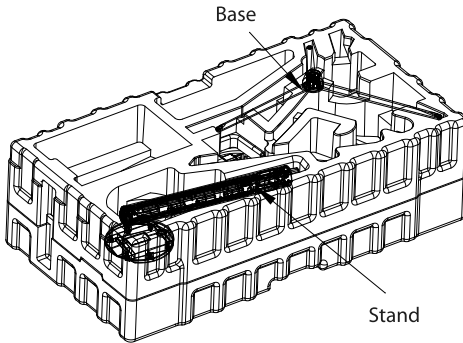

 2. Take out the mounting studs and screw them into the threaded holes.

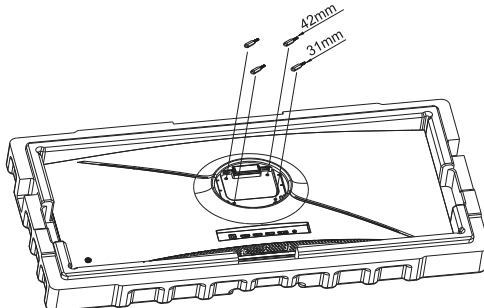


  3. Mount the wall mount assembly (75 x 75 mm; optionally available) to the back side of the monitor.
4. Note: Hang the assembled product on a stable wall. Do not pinch the screen with your hands

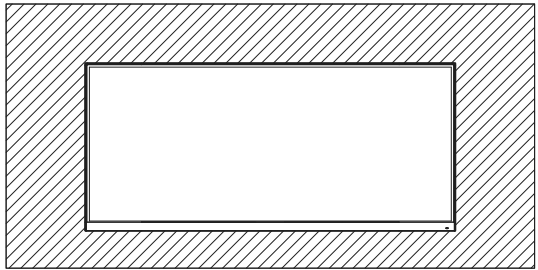
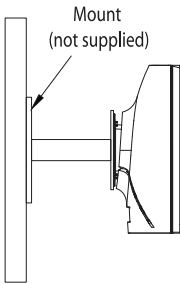


**!** Note: In order to prevent the monitor from falling when it is used on the wall, please install it properly and securely. Do not hang any additional objects on the wall bracket.

## 5. Adjustment

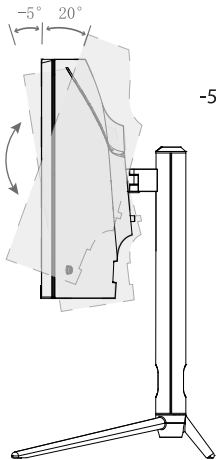 


  Tilting angle  
 $-5^\circ (\pm 2^\circ) \sim +20^\circ (\pm 2^\circ)$

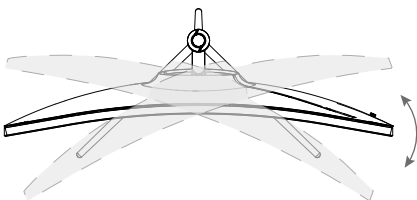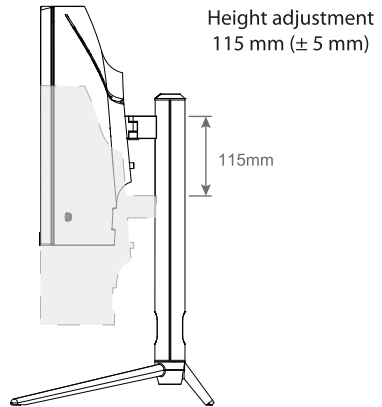


# 6. Rocker switch and indicator light

 Description of the rocker switch

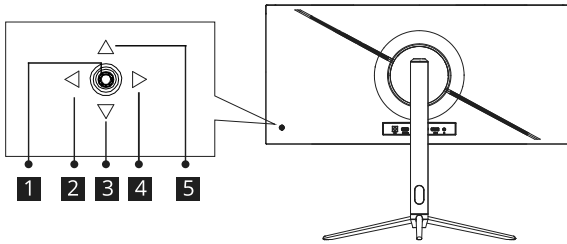

Button	Function
1	Power: Press to turn on/off the monitor.
2	Menu: Press to enter sub-menus/quickly enter the main menu.
3	Down: Press to move down in the menu/quickly enter the Gameplus mode.
4	Exit/hot key: Press to return to the previous menu/quickly adjust the input signal.
5	Up: Press to move up in the menu/quickly enter the contextual modes.

 
Explanation of indicator light

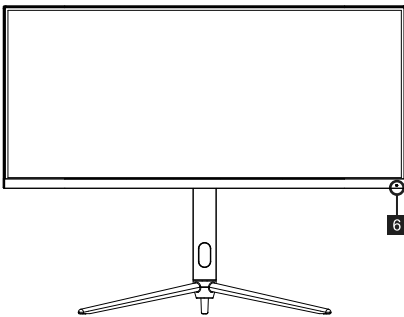

Indicator light: A steady blue light indicates that the power is on and that the monitor is operating normally. A steady red light indicates that no horizontal or vertical sync signal or no video input signal is detected, and that the monitor is in standby. Make sure your computer is turned on and functioning properly and check that all video cables are fully plugged in and connected to the monitor.



# 7. Cable connection

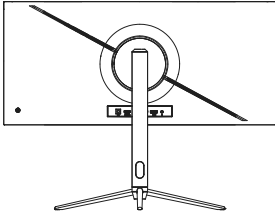 

- \* The interface configuration at the back of the monitor may vary by model.
- \* Note: If the power cable or signal cable are damaged, they must be replaced immediately.

### HDMI Port

Use a HDMI cable to connect the monitor to the HDMI port of the computer.

### DP Port

Use the DP cable (preferred) to connect the monitor to the DP port of the computer.

### Power Connection

Please connect the power cable to the power adapter, then connect the power adapter to the power port of the monitor and a properly grounded power outlet.

### Audio Out

 
Connect audio playback devices such as earphones or speakers to the Audio Out port of the monitor.

## 8. OSD Menu

- The color and shape of the OSD menu may be slightly differing according to your model.
- The OSD menu may change by updated functions.

The On-Screen Display (OSD) menu allows you to adjust the settings of your display. Turn the monitor on and move the rocker switch to the right to display the navigation interface.

1. Push the rocker switch to the right to enter the OSD main menu or to enter sub-menus.

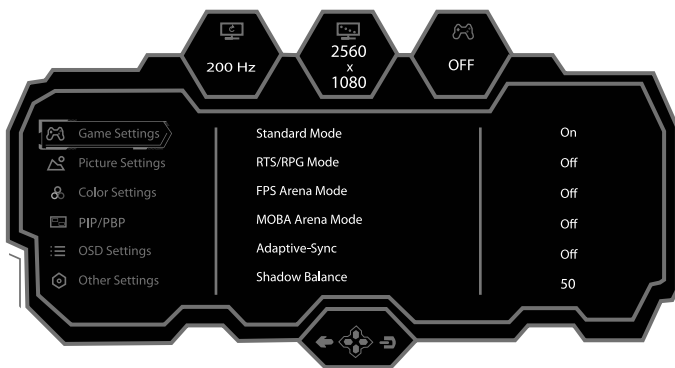

2. Push the rocker switch ▲ or ▼ to scroll through the functions.

- Select the desired function, then push the rocker switch ► to enter the submenu.
- Push the rocker switch ▲ or ▼ to scroll through sub-menus, and push the rocker switch ► to select and confirm the desired function.

3. Push the rocker switch ◀ to exit from the menu screen.

## 9. Basic parameters

- The function list in this manual is for reference only and may vary by model.

Main Menu	Sub Menu	Option
Game Settings	Standard Mode	Off/On
	RTS/RPG Mode	Off/On
	FPS Arena Mode	Off/On
	MOBA Arena Mode	Off/On
	Adaptive-Sync	Off/On
	Shadow Balance	0-100
	Response Time	Off/Normal/Fast/Ultrafast
	Refresh Rate	Off/On/Position
	Game Crosshair	Off/Crosshair1/Crosshair2/Crosshair3/Crosshair4/Crosshair5/Crosshair6
	Game Time	Off/On: 15:00/30:00/45:00/60:00/Position
	Dynamic Brightness	Off/Normal/Expert/Elaboration
	MPRT	Off/On
	Ambient Lighting	Off/On
Picture Settings	Brightness	0-100
	Contrast	0-100
	DCR	Off/On
	Contextual Mode	Off/Movie Mode/Reading Mode/Night Mode/Eye Care Mode
	Low Blue Light	0-100
	Sharpness	0-5
	Gamma	1,8/2,0/2,2/2,4/2,6/S. curve
	Aspect Ratio	Wide Screen/4:3/1:1/Auto
Color Settings	Warm	Off/On
	Natural	Off/On
	Cool	Off/On
	User1	Off/On: 0-100 (R/G/B)
	User2	Off/On: 0-100 (R/G/B)
	User3	Off/On: 0-100 (R/G/B)
	Hue	0-100 (R/G/B/C/M/Y)
	Saturation	0-100 (R/G/B/C/M/Y)

Main Menu	Sub Menu	Option
PIP/PBP	PIP/PBP Mode	Off/PIP Mode/PBP 2Win 1:1/PBP 2Win 2:1/PBP 2Win 1:2
	Sub-signal Source	DP1/DP2/HDMI1/HDMI2
	Audio Source	Auto/DP1/DP2/HDMI1/HDMI2
	PIP Position	Top right / Top left / Bottom right / Bottom left
	PIP Size	Small/Medium/Large
	Window Swap	Off/On
OSD Settings	Language	简体中文/English/한국어/عربي/Portugues do Brasilazil/Deutsch/Nederlands/Suomi/Français/Ελληνικά/Indonesia/Italiano/日本語/Malaysia/Polski/Português/Русский/Español/Українська//繁体中文/Türkçe and more
	OSD Time Out	5-60
	OSD H-Position	0-100
	OSD V-Position	0-100
	OSD Transparency	0-5
	Hotkey1 Setting	Brightness/Contrast/Volume/Mute/Shadow Balance/Game Crosshair/Refresh Rate/Game Time/Adaptive-Sync/Contextual Mode/Input Signal/Dynamic Brightness
	Hotkey2 Setting	
	Hotkey3 Setting	
OSD Lock	Off/On	
Other Settings	Input Signal	Auto/DP1/DP2/HDMI1/HDMI2
	Volume	0-100
	Mute	Off/On
	Auto Power	Off/On
	Eyeshield reminder	Off/On
	Reset	No/Yes
	Information	Input Source / Resolution / Mode

Product model	LC-M30UWFC	
Product name	Liquid Crystal Display	
Screen size	29,5" / 74,93 cm	
Aspect ratio	21:9	
Viewing angle	178° (H) / 178° (V)	
Contrast ratio	3000:1 (typ.)	
Color	16,7 M	
Resolution	2560 x 1080 pixels	
Refresh rate	200 Hz	
Power input	12,0 V $\overline{\text{---}}$ 4,0 A The standard voltage and power supply may vary with countries, please refer to the label at the back of the product.	
Product dimensions	Without stand	701,1 x 121,7 x 317,6 mm
	With stand	701,1 x 269,3 x 536,3 mm
Tilting angle	Forward tilting $-5^\circ \pm 2,0^\circ$ ; Backward tilting $20^\circ \pm 2,0^\circ$	
Height range	115 $\pm$ 5mm	
Rotation angle	$\pm 25^\circ$ ( $\pm 2,5^\circ$ )	
Environmental conditions	Usage	Temperature: 0°C ~ 40°C (32°F ~ 104°F) Humidity: 10 % ~ 90 % RH (non-condensing)
	Storage	Temperature: -20° ~ 60° (-4°F ~ 140°F) Humidity: 5 % ~ 95 % RH (non-condensing)

LC-POWER™

Silent Power Electronics GmbH

Formerweg 8

47877 Willich

Germany

[www.lc-power.com](http://www.lc-power.com)