 


IRONCLAW RGB

FPS/MOBA GAMING MOUSE

GETTING TO KNOW YOUR MOUSE

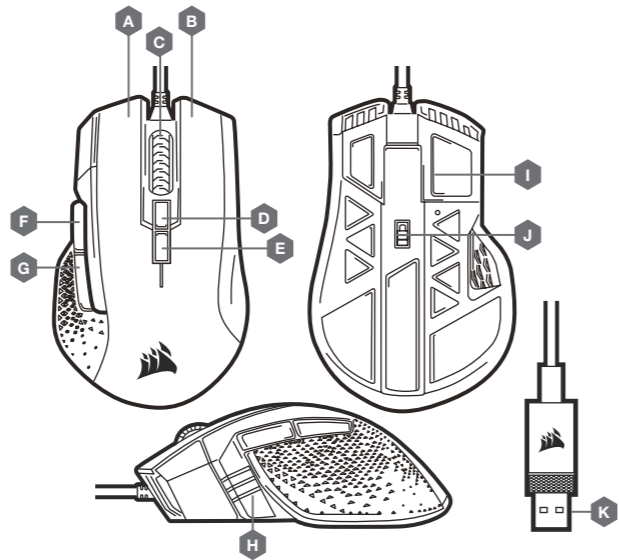

- A — LEFT CLICK BUTTON
- B — RIGHT CLICK BUTTON
- C — MIDDLE CLICK BUTTON
- D — PROFILE CYCLE BUTTON
- E — DPI CYCLE BUTTON
- F — FORWARD BUTTON
- G — BACKWARD BUTTON
- H — MULTI-PURPOSE LED INDICATOR
- I — PTFE GLIDE PADS
- J — OPTICAL GAMING SENSOR
- K — USB CONNECTION CABLE

- G — BACKWARD BUTTON
- H — MULTI-PURPOSE LED INDICATOR
- I — PTFE GLIDE PADS
- J — OPTICAL GAMING SENSOR
- K — USB CONNECTION CABLE

SETTING UP YOUR MOUSE

- > Turn on your computer.
- > Connect the mouse to available USB 2.0 or USB 3.0 port on your computer.
- > Download the iCUE software from www.corsair.com/downloads.
- > Run the installer program.
- > Follow instructions for installation.

MULTI-PURPOSE LED INDICATOR

Various aspects of mouse operation are communicated through multi-purpose LED indicator located on the left side of the mouse.

ONBOARD PROFILE STATUS	MULTI-PURPOSE LED INDICATOR		
	LED #1	LED #2	LED #3
PROFILE #1	RED	OFF	OFF
PROFILE #2	OFF	GREEN	OFF
PROFILE #3	OFF	OFF	BLUE
DPI STAGE STATUS			
STAGE #1	CYAN	OFF	OFF
STAGE #2	CYAN	CYAN	OFF
STAGE #3	CYAN	CYAN	CYAN

For use only with NRTL listed end product and Mouse Rating: 5V $\overline{\text{---}}$ 200mA

CAUTION!
 The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

 
FC WARNING: Changes or modifications not expressly approved by CORSAIR MEMORY, Inc could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- > Reorient or relocate the receiving antenna.
- > Increase the separation between the equipment and receiver.
- > Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- > Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter. Operation is subject to the following two conditions:
 (1) this device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.

PRÉSENTATION DE LA SOURIS

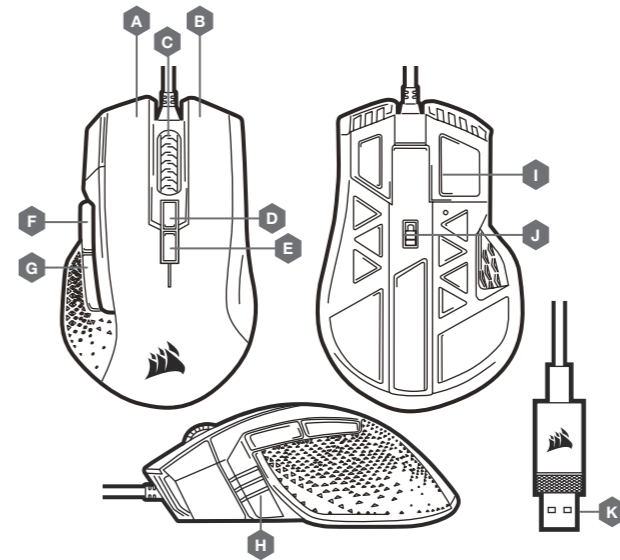

- A — BOUTON CLIC GAUCHE
- B — BOUTON CLIC DROIT
- C — BOUTON CLIC DU MILIEU
- D — BOUTON DÉFILEMENT DE PROFILS
- E — BOUTON DÉFILEMENT DE PPP
- F — BOUTON SUIVANT
- G — BOUTON PRÉCÉDENT
- H — VOYANT À DEL MULTIFONCTION
- I — PATINS EN PTFE
- J — CAPTEUR DE JEU OPTIQUE
- K — CÂBLE DE CONNEXION USB

CONFIGURATION DE LA SOURIS

- > Allumez votre ordinateur.
- > Branchez la souris sur un port USB 2.0 ou USB 3.0 disponible sur votre ordinateur.
- > Téléchargez le logiciel iCUE sur www.corsair.com/downloads.
- > Exécutez le programme d'installation.
- > Suivez les instructions d'installation.

VOYANT À DEL MULTIFONCTION

Le voyant à DEL multifonction permet de signaler les différents états de la souris. Il est situé sur le côté gauche de la souris.

STATUT DE PROFIL INTÉGRÉ	VOYANT À DEL MULTIFONCTION		
	LED 1	LED 2	LED 3
PROFIL 1	ROUGE	ÉTEINT	ÉTEINT
PROFIL 2	ÉTEINT	VERT	ÉTEINT
PROFIL 3	ÉTEINT	ÉTEINT	BLEU
STATUT NIVEAU PPP			
NIVEAU 1	CYAN	ÉTEINT	ÉTEINT
NIVEAU 2	CYAN	CYAN	ÉTEINT
NIVEAU 3	CYAN	CYAN	CYAN

IRONCLAW RGB



WEB: corsair.com

PHONE: (888) 222-4346

SUPPORT: support.corsair.com

BLOG: corsair.com/blog

 
FORUM: forum.corsair.com

YOUTUBE: youtube.com/corsairhowto

© 2018 CORSAIR MEMORY, Inc. All rights reserved. CORSAIR and the sails logo are registered trademarks in the United States and/or other countries. All other trademarks are the property of their respective owners. Product may vary slightly from those pictured. 49-001760 AA



CONOZCA SU MOUSE

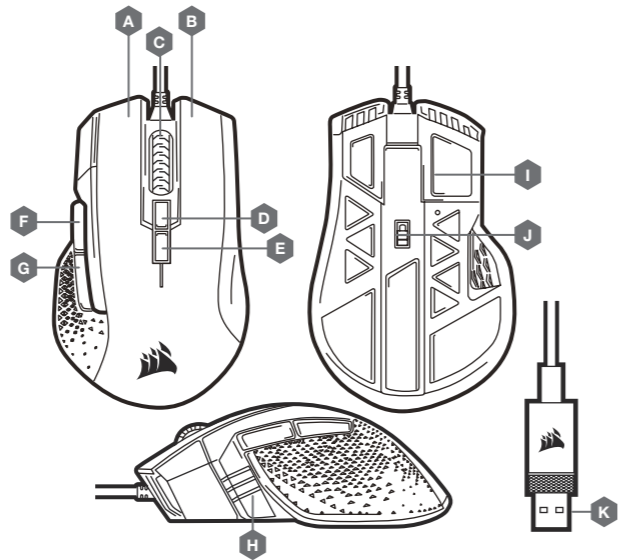

- A — BOTÓN DE CLIC IZQUIERDO
- B — BOTÓN DE CLIC DERECHO
- C — BOTÓN DE CLIC MEDIO
- D — BOTÓN DE CICLO DE PERFILES
- E — BOTÓN DE CICLO DE DPI
- F — BOTÓN ADELANTE
- G — BOTÓN ATRÁS
- H — INDICADOR LED MULTIPROPÓSITO
- I — COJINES DE DESLIZAMIENTO PTFE
- J — SENSOR ÓPTICO DE JUEGOS
- K — CABLE DE CONEXIÓN USB

- G — BOTÓN ATRÁS
- H — INDICADOR LED MULTIPROPÓSITO
- I — COJINES DE DESLIZAMIENTO PTFE
- J — SENSOR ÓPTICO DE JUEGOS
- K — CABLE DE CONEXIÓN USB

- G — BOTÓN ATRÁS
- H — INDICADOR LED MULTIPROPÓSITO
- I — COJINES DE DESLIZAMIENTO PTFE
- J — SENSOR ÓPTICO DE JUEGOS
- K — CABLE DE CONEXIÓN USB

CONFIGURACIÓN DEL MOUSE

- > Encienda su equipo.
- > Conecte el mouse a un puerto USB 2.0 o 3.0 disponible en su computadora.
- > Descargue el software de iCUE en www.corsair.com/downloads.
- > Ejecute el instalador.
- > Siga las instrucciones para completar la instalación.


INDICADOR LED MULTIPROPÓSITO

Varios aspectos de la operación del mouse se comunican mediante el indicador LED multipropósito ubicado en el lado izquierdo del mouse.

ESTADO DEL PERFIL INTEGRADO	INDICADOR LED MULTIPROPÓSITO		
	LED #1	LED #2	LED #3
PERFIL #1	ROJO	APAGADO	APAGADO
PERFIL #2	APAGADO	VERDE	APAGADO
PERFIL #3	APAGADO	APAGADO	AZUL
ESTADO DE LA ETAPA DPI			
ETAPA #1	CIAN	APAGADO	APAGADO
ETAPA #2	CIAN	CIAN	APAGADO
ETAPA #3	CIAN	CIAN	CIAN

ESPAÑOL

 CONHEÇA O MOUSE

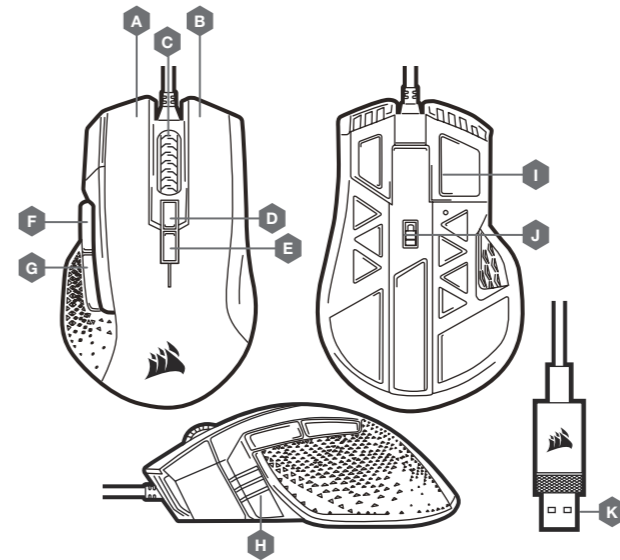

- A — BOTÃO DE CLIQUE ESQUERDO
- B — BOTÃO DE CLIQUE DIREITO
- C — BOTÃO DE CLIQUE CENTRAL
- D — BOTÃO DE CICLO DE PERFIL
- E — BOTÃO DE CICLO DPI
- F — BOTÃO PARA AVANÇAR
- G — BOTÃO PARA VOLTAR
- H — INDICADOR LED MULTIFUNCIONAL
- I — ALMOFADAS DESLIZANTES DE PTFE
- J — SENSOR ÓPTICO PARA JOGOS
- K — CABO DE CONEXÃO USB

PORTUGUÊS

CONFIGURAÇÃO DO MOUSE

- > Ligue o computador.
- > Conecte o mouse a uma porta USB 2.0 ou USB 3.0 do computador.
- > Baixe o software iCUE em www.corsair.com/downloads.
- > Execute o programa de instalação.
- > Siga as instruções de instalação.

INDICADOR LED MULTIFUNCIONAL

Diversos aspectos da operação do mouse são comunicados pelo indicador LED multiúso, localizado no lado esquerdo do mouse.

STATUS DO PERFIL INTERNO	INDICADOR LED MULTIFUNCIONAL		
	LED 1	LED 2	LED 3
PERFIL 1	VERMELHO	DESLIGADO	DESLIGADO
PERFIL 2	DESLIGADO	VERDE	DESLIGADO
PERFIL 3	DESLIGADO	DESLIGADO	AZUL
STATUS DO ESTÁGIO DE DPI			
ESTÁGIO 1	CIANO	DESLIGADO	DESLIGADO
ESTÁGIO 2	CIANO	CIANO	DESLIGADO
ESTÁGIO 3	CIANO	CIANO	CIANO

PORTUGUÊS